

Оригинальный номер картриджа	Подходит для	Заправка, грн.	Восстановление, грн.
<b>BROTHER</b>			
BROTHER DR-2175 (TN2175)	BROTHER HL-21x0R, DCP-7030/ 7032, MFC-7320	93	
<b>CANON</b>			
CANON 703 (7616A005)	CANON 703, Q2612A для LBP-2900/ 3000, HP LJ1010/ 1012/ 1015/ 1020/ 1022	81	201
CANON 708 (0266B002)	CANON 708, Q5949A для LBP-3300/ 3360, HP LJ 1160/ 1320 series	81	201
CANON 712 (1870B002)	CANON 712 LBP-3010/ 3020	93	237
CANON 719 (3479B002)	CANON 719 LBP-6300DN/ 6650DN, MF5580DN/ 5840DN	81	237
CANON 725 (3484B002)	CANON 725 LBP-6000 black	93	237
CANON 728 (3500B002)	CANON 728 для i-SENSYS MF4410/ 4430/ 4450/ 4550D/ 4570DN/ 4580DN	93	237
CANON FX-10 (0263B002)	CANON FX-10 для MF4018/ 4120/ 4140/ 4150/ 4270/ 4660PL/ 4690PL, Fax L100/ 120/ 140	81	201
CANON T (7833A002)	CANON T for PC-D320/ 340, Fax L380/ L400	81	201
EP-22 (1550A003)	CANON EP-22, C4092A для LBP-800/ 810/ 1120 HP LJ1100	81	201
EP-25 (5773A004)	CANON EP-25, C7115A для LBP-1210, HP LJ1000/ 1200/ 3300 series	81	237
EP-27 (8489A002)	CANON EP-27 для LBP-3200, MF3110/ 3228/ 3240/ 5630/ 5650/ 5730/ 5750/ 5770	81	237
FC-E16/b (1492A003)	CANON FC-E16 Black	81	237
<b>HEWLETT PACKARD (HP)</b>			
HP LJ CB435A	HP LJ P1005/ 1006	93	237
HP LJ CB436A	HP LJ P1505/ M1120/ 1522 series	93	237
HP LJ CE278A	HP LJ P1566/ 1606DN/ 1536dnf	93	237
HP LJ CE285A	HP LJ P1102	93	237
HP LJ CE505A	HP LJ P2035/ P2055d/ 2055dn	81	237
HP LJ Q2612A	CANON 703, Q2612A для LBP-2900/ 3000, HP LJ1010/ 1012/ 1015/ 1020/ 1022	81	201
HP LJ Q2624A	HP LJ 1150 series	81	237
HP LJ Q5949A	HP LJ 1160/ 1320 series	81	237
HP LJ Q6470A	HP CLJ3600/ 3800 black	303	393
HP LJ Q6471A	HP CLJ3600/ 3800 black	303	393
HP LJ Q6472A	HP CLJ3600/ 3800 black	303	393
HP LJ Q6473A	HP CLJ3600/ 3800 black	303	393
HP LJ Q7553A	HP LJ P2015	81	237
CLJ-1600 (Q6000A) Black	HP CLJ1600/ 2600 black	288	
CLJ-1600 (Q6001A) Cyan	HP CLJ1600/ 2600 black	288	
CLJ-1600 (Q6002A) Yellow	HP CLJ1600/ 2600 black	288	
CLJ-1600 (Q6003A) Magenta	HP CLJ1600/ 2600 black	288	
LJ-1100 (C4092A)	HP LJ 1100&1100A	81	201
LJ-1200 (C7115A)	HP LJ 1200/ 1220/ 1000w/ 1005w	81	237
LJ-1300 (Q2613A)	HP LJ 1300 series	81	237
LJ-2100 (C4096A)	HP LJ 2100/ 2200	93	237
LJ-5L/6L (C3906A)	HP LJ 5L/ 6L	81	201
LJ-5P/6P (C3903A)	HP LJ 5P/ 5MP/ 6P/ 6MP	81	237
<b>SAMSUNG</b>			
SAMSUNG ML-1210/1250 (ML-1210D3/XEV)	SAMSUNG 1210/ 1250/ 1430/ 1220/ 1010	81	
SAMSUNG ML-1520D3 (ML-1520D3/XEV)	SAMSUNG ML-1520	81	
SAMSUNG ML-1610D2 (ML-1610D2/ELS)	SAMSUNG ML-1610/ 1615	93	264
SAMSUNG ML-1710D3 (ML-1710D3/XEV)	SAMSUNG ML-1500/ 1510/ 1710/ 1710P/ 1740/ 1750 black	81	
SAMSUNG ML-2010D3 (ML-2010D3/ELS)	SAMSUNG ML-2010/ 2010P/ 2015/ 2510/ 2570/ 2571 N	93	264
SAMSUNG ML-2250D5 (ML-2250D5/ELS)	SAMSUNG ML-2250/ 2251N/ 2251NP/ 2252W	93	
SAMSUNG ML-4500 (ML-4500D3/ELS)	SAMSUNG ML-4500/ 4600	81	
SAMSUNG MLT-D101S	SAMSUNG ML-2160/ 2165/ 2167/ 2168, SCX-3400/ 3405/ 3407	93	
SAMSUNG MLT-D1043S/XEV	SAMSUNG ML-1661/ 1861/ 1866	81	162
SAMSUNG MLT-D109S (D109S/SEE)	SAMSUNG SCX-4300	81	
SAMSUNG SCX-4100D3 (SCX-4100D3/XEV)	SAMSUNG SCX-4100	81	
SAMSUNG SCX-D4200A (SCX-D4200A/ELS)	SAMSUNG SCX-4200/ 4220	81	162
<b>XEROX</b>			
XEROX ML-3420(D5) (106R01033)	XEROX Phaser 3420/ 3425	93	186
XEROX Phaser 3100 (106R01378)	XEROX Phaser 3100	81	
XEROX PE114 (013R00607)	XEROX PE114e	81	
XEROX PE16 (113R00667)	XEROX PE16/ PE16e	81	
XEROX Phaser 3117/3122/3124/3125 (106R01159)	XEROX Phaser 3117/ 3122/ 3124/ 3125	93	